AIR DEFLECTOR INSTALLATION INSTRUCTIONS

These instructions cover the installation of the Air Deflector on a packaged terminal air condition (PTAC) unit. The Air Deflector installs with 3 screws (included). Some PTAC models will require the use the adapter wedges (included). There are 5 adapter wedges per screw provided in order to allow changing the mounting angle of the Air Deflector on the PTAC unit.

USING THE AIR DEFLECTOR SCREWS

STEP 1 - Position the Air Deflector onto the PTAC unit as shown in Fig.1.

STEP 2 - Drill 3 pilot holes into the PTAC unit.

STEP 3 - Secure the Air Deflector to the PTAC unit using the 3 screws.

STEP 4 - Tighten the 3 screws onto the PTAC unit.

FIGURE 1

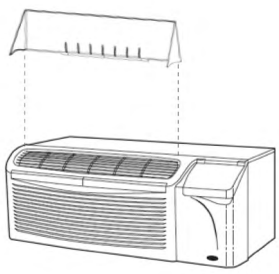

FIGURE 2

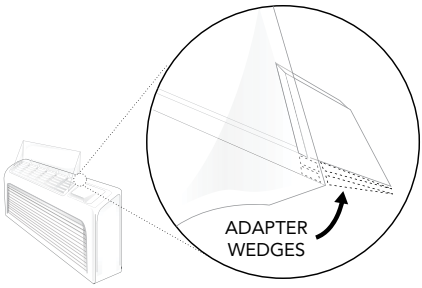

USING THE ADAPTER WEDGES

STEP 1 - Stack the desired amount of wedges needed in order to position the Air Deflector onto the PTAC unit, as shown in Fig.2.

STEP 2 – Drill 3 pilot holes into the PTAC unit.

STEP 3 - Place the wedges over the screw holes.

STEP 4 – Secure the Air Deflector to the PTAC unit using the 3 screws as shown in Fig.1.

STEP 5 – Tighten the 3 screws onto the PTAC unit.

Once installed, the Air Deflector will direct the air flow away from curtains & other obstructions, as shown in Fig.3.

FIGURE 3

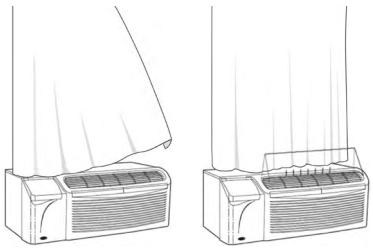

TayMac